



Maintenance Schedule				
ITEM	FUNCTION REQUIRED	3 MONTHS OR 3,000 MILES	6 MONTHS OR 6,000 MILES	12 MONTHS OR 12,000 MILES
Brakes	Test that they are operational	Before every use		
Brake Adjustment	Adjust to proper operating clearance	✓		
Brake Magnets	Inspect for wear and current draw		✓	
Brake Linings	Inspect for wear and contamination			✓
Brake Controller	Check for correct amperage and modulation		✓	
Brake Cylinders	Check for leaks, sticking			✓
Brake Lines	Inspect for cracks, leaks, kinks			✓
Trailer Brake Wiring	Inspect wiring for bare spots, fray, etc.			✓
Breakaway Systems	Check battery charge and switch operation	Before every use		
Hub / Drum	Check for abnormal wear or scoring			✓
Wheel Bearings & Cups	Inspect for corrosion or wear; clean and repack			✓
Seals	Inspect for leakage; replace if removed			✓
Springs	Inspect for wear, loss of arch			✓
Suspension Parts	Inspect for bending, loose fasteners, wear		✓	
Hangers	Inspect welds			✓
Wheel Nuts and Bolts	Tighten to specified torque values	Re-torque after first 50 miles of use and periodically re-check the torque.		
Wheels	Inspect for cracks, dents, or distortion			✓
Tire Inflation Pressure	Inflate tires to mfg's. specifications	Before every use		
Tire Condition	Inspect for cuts, wear, bulging, etc.	✓		
Grease (Marine Application)	Check for grease Lithium base NLGI #2 grease	Before every use		
Wheel Bearings & Cups	Inspect for corrosion or wear; clean and repack	✓ (marine)		✓

For Technical Service or warranty information please call: 877-787-2453

PUB-MAINT
7/2008